ECO FLUSH

EcoFlush Vessel Installation Instructions B8100 B8104 B8106

- 1. Remove porcelain toilet tank by unsecuring the tank bolts
 - a. Located on the underside of the toilet bowl where tank sits
 - b. If water is in base of tank out side black vessel, pour out
- 2. Gently lay tank on back side
- 3. Using a pair of pliers, unscrew lower supply nut (white)
- 4. Remove tank to bowl gasket, set aside as you will need to reuse it.
- 5. Using pliers and the cartridge removal tool (if needed), remove the large vessel nut. Approximately 2.5" in diameter (white)
- 6. Remove the Flush Control Valve
 - a. Remove chrome leaver by placing flat blade screwdriver between tank and leaver, twist. The width of the screwdriver will get the handle past the notch that holds it in place.
 - b. Using pliers remove the Flush Control Valve nut (white)
 - c. Disconnect the long orange & long blue tubes that run from the handle to the center of the main unit. The 2 black tabs will push away from one another (right side to the right, left side to the left)
 - d. Pull back and remove Flush Control Valve from tank
- 7. Vessel is now free to lift out.
- 8. Set aside if returning to manufacturer
- 9. Reverse steps to install the new EcoFlush vessel.

If any questions or problems installing vessel please call: 800-391-9821